



RALLYMETER 02 | STAGES

(last rev. v8.5 05/2017)

We access to this section by pressing the blue button in the bottom navigation bar.

The first time we access this section we will see a screen with two buttons, one for the lateral stage creation menu and a second one to create individual stages.

SIDE MENU, MULTIPLE STAGE CREATION

Here we can create various stages in a single click, very practical when we start a rally event.

We are asked to introduce the number of stages to create, a prefix to fill the stage ID and simply a create button.

If we have stages already created, the new ones will be added after the actually created ones.

STAGE LIST

We can see the summary of the entered stages in a single list. Here we can perform the following actions:

- Selecting the stage we will access to the detail of the stage to be able to edit it's data.
- Swiping finger from right to left a **DELETE** button will appear to delete this stage only.
- Holding press down, a new stage will be **INSERTED** before the actual one.

The stage list is coded with colors

BLUE- Normal stage

GREEN – COPY/REPEAT mode stage

ORANGE – TABLE MODE (No average defined)

RED – Distance not filled, needed to start.

STAGE EDITING

When selecting a stage we will be directed to the detail of the stage. All the numeric data has to be entered **WITHOUT** punctuation symbols. All the times are in hours, minutes and seconds. For example 001500 is 00hours 15minutes 00seconds.

- ID / NAME : (OPTIONAL). Prefix and stage name.
- COPY MODE: See copy mode manual annex.

- **DISTANCE:** The actual stage length (without punctuations). At the left we see (when we have the averages entered) the time at the end of stage (informative).
- **SECTOR DISTANCE:** Stage distance + link distance to next stage. It's always higher or at least equal to distance.
- **SECTOR TIME:** The time we have to arrive to next stage.
- **START HOUR:** The official start hour. If we fill all the distances & times correctly we will only need to fill the first stage start time, the rest ones will be automatically calculated in the calculate start times option in settings.
- **AVERAGES:**
We can have up to 99 averages per stage.

- **FROM:** The distance when this average will begin. The first one will always be zero.
In the keypad we will have a red button "REF" which will show us a button when we start the stage to activate the average when we decide manually.
- **AVERAGE SPEED:** The speed to activate. Accepts two decimals.
Time when average will be active (informative) is shown. A red TBL button will be shown, if we use it will fill the average with 8888 value which means tables mode. It's when we are given a table paper with distances and passing times.

If we press and hold for a second we will be show **INSERT / DELETE** button to insert or delete average.

- **CROSSES:**
Here we will introduce advises for navigation and / or adjustment points in known distances.
 - **DISTANCE:** The distance where we have the advise.
 - **MESSAGE (OPTIONAL):** An informative text to appear in the advise.
 - **ROADBOOK (PHOTOS):** Allows to take photos from the real road book and a custom image filter will be applied to make the photo clearer and synthetized. This photo will be shown in the co-pilot display and also in the pilot device (if we use pilot mode).