



RALLYMETER 14 | METRICS

(rev v11.5 12/2020)


Metrics in an inApp purchase that can be bought in Settings/Extras




Can be activated or stopped in the same place.



If this option is active, when we run the stage rallymeter will store each 10m the delay/advance and the adjusted distance.

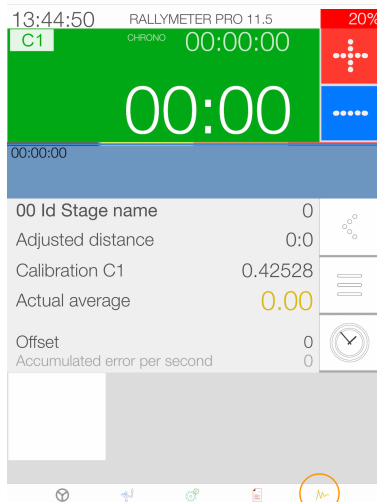

To show/manipulate we can go to Metrics tab.

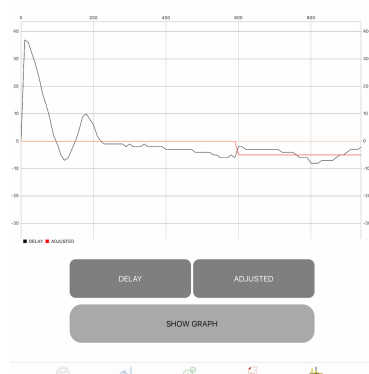

This information will be kept until we run this stage again (if needed) or when we delete the stage/rally